

JACKSON™

PT2525 RF REMOTE CONTROL **POWERSTAKE™**

SPECIFICATIONS:

- Voltage: 240Vac / 50Hz
- Installation: 1.8M Extension Cable, connect to the nearest powerpoint
- Rating: 240Vac / 2400W max. 10A (do not exceed)
- Channel code: Multiple code - code hopping
- Remote control frequency: 433.92MHz
- Remote control range: Up to 20m*See comments
- Remote control battery: L1028 / A23
- ON/STAND-BY indication: LED
- SAA Approval number: NSW21038
- Full instruction manual provided
- IP44 rated weatherproof housing receiver
- Use Outdoors



* WARNING - RANGE IS VARIABLE

The Jackson Remote Powerstake is a Radio Frequency Device (RF), and as such the range of the remote control is dependent on many factors. The range of the unit is up to 20 metres, however this can be affected by the height of the base (mount as high in your garden as possible) and whether the unit is blocked by plants or other line of sight blockage (try to position the base so that it is not blocked). In the case where there is interference from other radio transmitters or you have not positioned the base correctly, the range may decrease to 5-10 metres. Please also ensure that the battery in the remote is replaced at regular intervals, as this will also affect the range.

OPERATION:

- Control a number of receivers in each zone using a single transmitter, without interference.
- Assign individual unit code settings to each device to avoid interference with neighbor's system, maximum 4 receivers.
- Ensure maximum loading DOES NOT exceed 2400 watts 10 amps.

INSTRUCTIONS:


1. Remove the Remote Powerstake™ (The Receiver) and The Remote Control (The Transmitter) from the gift box and polybag (please dispose of the polybag thoughtfully, it is not a toy and must not be given to children). Open battery cover on transmitter and insert battery supplied. Ensure the battery is inserted with the correct polarity. Replace battery cover back onto the transmitter. Ensure the battery in the remote is replaced at regular intervals, as this will also affect the range.
2. Remove the rubber cover from the base of the mounting stake on the receiver. Carefully chose a place to insert the unit into the ground. Please ensure that you place the receiver in a vertical position, and clear of any obstacles, that could affect performance of the remote. (See below).



3. The range of the transmitter is up to 20 metres, however this range can be adversely affected by the height of the receiver (mount as high as possible in your garden) and whether the receiver is blocked or covered by plants or other obstacles (position the unit in a clear area, with a line of sight to the place you will most frequently use the transmitter). Please note that the range can also be affected by interference from other sources of Radio Frequency transmissions, such as TV towers and radio transmitters. Please ensure that the transmitter always has a fresh battery for optimum performance.
4. Connect the 1.8 metre power lead of the receiver to the power and turn the power ON. The LED on the receiver will light in GREEN colour to indicate power is activated.

5. Code Setting and Remote Activation –
(prior to programming, please ensure that the LED is green).

Press the SET button on the receiver once, the LED will show RED colour – immediately press ON on the transmitter (select 1, 2, 3 or 4). You have now set the code from this receiver to the transmitter. You can follow this exact procedure to add further receivers UP TO FOUR receivers can be activated by ONE transmitter.

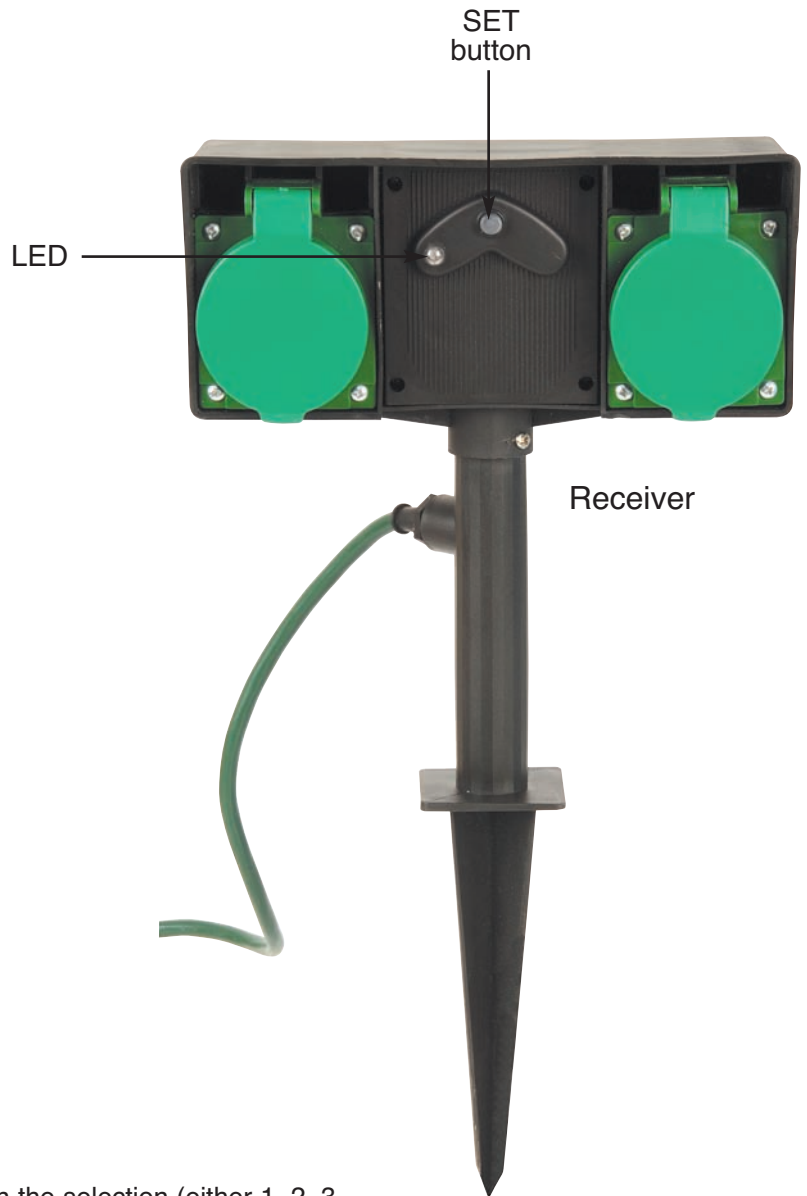

6. Please test the unit by pressing STANDBY on the selection (either 1, 2, 3 or 4) and then ON on the selection. The light will change from GREEN to RED and you will hear a “clicking” noise. The unit is now ready to connect lights, pumps or other devices.

7. OPERATING WARNINGS –

- a) Never immerse the transmitter or receiver in water.
- b) Do not install the receiver within 5 mtrs of any water body, such as a swimming pool etc
- c) Always use the receiver in a vertical position, never allow the power sockets to be exposed to the elements.
- d) Once appliances are plugged into the receiver, do not move the receiver.
- e) The battery in the transmitter should be replaced regularly. It is a L1028 / A23 12 volt dry cell battery.
- f) To reset all codes on the transmitter (to start again) simply insert a pen into the “reset” hole on the front of the transmitter.



Full Lifetime
Replacement
Warranty

Jackson re-order
code "PT2525"

JACKSON INDUSTRIES IS DEDICATED TO PROVIDING YOU WITH A SUPERIOR QUALITY PRODUCT

If you are not completely satisfied with the quality and workmanship of this Jackson product, please contact one of our Customer Relations Controllers. Telephone 02 9899 8833 or send the relevant product details to: Jackson Industries Customer Relations c/- PO Box 6388, Business Centre, Baulkham Hills, NSW, 2153, Australia.

Made In China

N 95

