



**Jackson™  
Green  
Saver**  
series

Save power, money  
and help to reduce  
your impact on the  
environment.

**3**  
OUTLETS

**Wireless remote  
controlled power sockets**

**Turn appliances on & off**

Ideal for lamps & small appliances



#### INSTALLATION INSTRUCTIONS

1. Open the battery compartment of the handheld remote control transmitter and insert the battery provided ensuring that it is positioned correctly.
2. Plug the first receiver unit into a mains power outlet. The light will illuminate and flash once per second to indicate that it is in learning mode.
3. Select and press one of the 4 STANDBY buttons on the handheld remote control transmitter. The receiver will automatically learn the code. The light on the receiver will flash and then turn off to indicate this.
4. Repeat steps 2-3 for each receiver unit that you wish to use. Please note that you can have multiple receivers operating from a single ON/STANDBY button pair on the handheld remote control transmitter.
5. Operate the receiver unit(s) by pressing the corresponding ON/STANDBY buttons on the handheld remote control transmitter or by pressing the ON/STANDBY button on the front of the receiver unit.
6. To quickly turn off all of the receivers, simply press the ALL STANDBY button on the handheld remote control transmitter.

#### RESET INSTRUCTIONS

Should you wish to reprogram the receivers, either press and hold the ON/STANDBY button on the receiver for 3 seconds to reprogram that single unit or press and hold the ALL STANDBY button on the handheld remote control transmitter to reprogram all of the receiver units.

#### TROUBLESHOOTING

**If your receiver does not operate:**

1. Check the distance between the remote and receiver. If this exceeds the maximum operating range of 20 metres, the transmitter will need to be brought closer to the receiver. Please note that this range may be reduced by environmental factors such as brick walls, interference from other appliances or similar.
2. Check the battery in the remote control transmitter unit and replace if needed.
3. If you have recently had a power outage, this can cause the receiver units to reset and require re-installation. Refer to INSTALLATION INSTRUCTIONS (left) for details.



#### Product information:

Voltage	240VAC~ / 50Hz
Rating	10A / 2400W max.
Learning code	More than 1 million combinations
Remote Frequency	433.92MHz
Remote Range	20 Metres
Code Setting	Learning
ON/STANDBY Indicator	LED
Remote battery type	L1028* 1-12V DC Alkaline

**Jackson™  
INDUSTRIES Pty Ltd**

A WHOLLY OWNED AUSTRALIAN COMPANY  
PHONE: (02) 9899 8833 [www.ji.com.au](http://www.ji.com.au)  
ABN: 81 003 438 104

Approved to Australian standards

Approval number SAA090309EA  
For indoor use only  
Do not open

**NEED HELP?**

Contact us with your questions or comments  
Phone: (02) 9899 8833 Web: [www.ji.com.au](http://www.ji.com.au)  
Postal: PO Box 6388 BHBC,  
Baulkham Hills NSW 2153

PKG130911



N95