

Jackson™

Portable Wireless Chime Kit WC8181






Components:

1. Push Button
2. Bell Push Battery
3. Portable Chime
4. Speaker
5. Musical Tone selector
6. Volume control
7. Chime Batteries

Setup Instructions:

1. Gently pull down on the securing tab at the bottom of the push button.
2. Separate the front and back parts of the push button casing.
3. Insert the included 23A battery in the battery compartment, observing the + and - markings.

4. Push the front and back parts of the push button casing together, taking care to position the rubber seal around the edge of the casing.
5. Using the included double-sided tape, affix the push button to a suitable surface. Avoid locating the push button on or directly near metallic surfaces as this may reduce the operating range.
6. Remove the battery cover of the door chime (located on the rear of the unit).
7. Insert 2 x 'AA' Batteries (not supplied), ensuring that the positive and negative markings on the battery are correctly aligned with the positive and negative markings on the door chime. Note that only alkaline batteries are recommended for use with this chime.
8. Replace the battery cover.
9. If necessary, select a melody and set the volume as per the instructions on the next page.
10. Position the door chime as needed within the range of the push button. Note that the door chime unit is for indoor use only. Avoid locating the door chime on or directly near metallic surfaces as this may reduce the operating range.

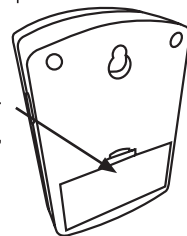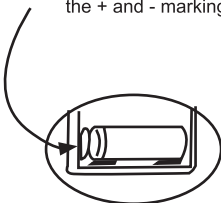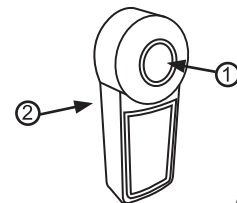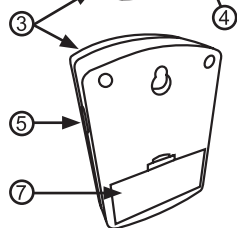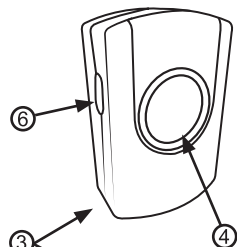

Jackson™
INDUSTRIES Pty Ltd

A WHOLLY OWNED AUSTRALIAN COMPANY

PHONE: (02) 9899 8833 www.ji.com.au

ABN: 81 003 438 104

Approved to Australian standards




N95

Melody Selection:

The WC8181 Chime Kit has 38 musical tones to select from. To select a tone, press the "Melody Select" button on the side of the door chime. The chime will play the selected tone. Continue pressing the "Melody Select" button until the desired tone is selected.

Volume Control Setting:

To select the Chime Volume level, press the "Volume" button on the side of the door chime. The chime will play the selected tone at the selected volume. Continue pressing the "Volume" button until the desired volume level is selected.

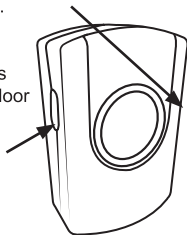

Changing Batteries:

Push Button:

1. Gently pull down on the securing tab at the bottom of the push button.
2. Separate the front and back parts of the push button casing.
3. Remove the old battery from the holder.
4. Replace with a new '23A' 12V Alkaline battery, ensuring that the positive and negative markings on the battery are correctly aligned with the positive and negative markings on the push button.
5. Push the front and back parts of the push button casing together, taking care to position the rubber seal around the edge of the casing.
6. Test the operation of the chime kit.

Chime Unit:

1. Remove the battery cover of the door chime (located on

the rear of the unit).

2. Remove the old batteries from the holder.
3. Insert 2 x 'AA' Batteries, ensuring that the positive and negative markings on the battery are correctly aligned with the positive and negative markings on the door chime. Note that only alkaline batteries are recommended for use with this chime.
4. Replace the battery cover.
5. Test the operation of the chime kit.

Troubleshooting:

In case of the door chime does not sound, please check the following:

1. Ensure that new batteries are used in both the push button and door chime and that they are inserted correctly.
2. Check that the push button is in range of the door chime by moving the push button and door chime close to each other.

Technical Parameters:

1. Rated Voltage:
Receiver: 3V
Transmitter: 12V
2. Maximum Volume: 90 dB
3. Working Frequency: 433 MHz
4. Maximum Range: 60 Metres (note that range may be affected by environmental factors and nearby interference sources)